


Update 2008

CONTI[®] BTT Hz
Belt Tension Tester
Benutzerhandbuch
User Guide

Power Transmission Group

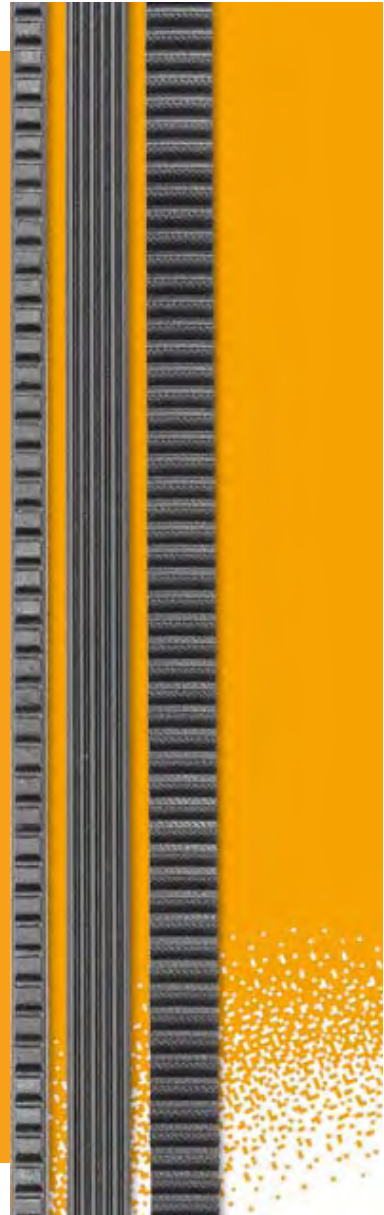

EVOLUTION 2007-2008

- ▶ **Zugefügte Marken, Modelle und Änderungen betreffend der Katalogausgabe 2007.**
- ▶ **Marques, modèles et motorisations ajoutés par rapport au catalogue édition 2007.**
- ▶ *Brands, vehicle names and motorizations added compared to the catalogue published in 2007.*

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Merkmal
Caractéristiques**
Characteristics

**Einstellspannung
Tension de réglage**
Adjustment tension

**Schema
Schéma**
Diagram



Audi									
80									
	1.9 D	1Y	Distribution Distribution		> Mtr. 378 364 Mtr. 378 365 >	120-123	2	120-123 Auto	VAG-x VAG-d
	1.9 TD	AAZ	Distribution Distribution		> Châ. 552 765 Châ. 552 766 >	120-123	2	120-123 Auto	VAG-x VAG-d
	1.9 TDi	1Z	Distribution Distribution		> Mtr. 289 575 Mtr. 289 576 >			Auto Auto	VAG-i VAG-i
100									
	1,8	RS	Distribution			77-80	2	77-80	VAG-a
	1,8	4B	Distribution			77-80	2	77-80	VAG-a
Coupé									
	1.6	YN	Distribution			77-80	2	77-80	VAG-a
	1,8	DD	Distribution			77-80	2	77-80	VAG-a
		JV	Distribution			77-80	2	77-80	VAG-a
		NE	Distribution			77-80	2	77-80	VAG-a
	2,0	ABK	Distribution			77-80	2	77-80	VAG-a
A2									
	1.4 16V	AUA	Distribution	2000	▶ 2002			Auto	VAG-w
		BBY	Distribution	2002	▶			Auto	VAG-w
	1.6 16V FSi	BAD	Distribution	2002	▶			Auto	VAG-w
A3									
	1.8 20V Turbo	APP	Distribution					Auto	VAG-h
	1.9 TDi	AGR	Distribution Distribution		> Mtr. 565 000 Mtr. 565 001 >			Auto Auto	VAG-v VAG-v
		AHF	Distribution Distribution		> Mtr. 565 000 Mtr. 565 001 >			Auto Auto	VAG-v VAG-v
		ALH	Distribution Distribution		> Mtr. 500 000 Mtr. 500 001 >			Auto Auto	VAG-v VAG-v
	1.9 TDi	ASV	Distribution					Auto	VAG-v
A4									
	1.9 D	AFF	Distribution					Auto	VAF-i
	1,9 TDi	AFN	Distribution					Auto	VAG-i
		AHU	Distribution					Auto	VAG-i
		AGR	Distribution					Auto	VAG-v

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Audi									
A6									
	1.9 TDI	1Z	Distribution					Auto	VAG-i
		AFN	Distribution					Auto	VAG-i
		AHU	Distribution					Auto	VAG-i
	2.0 TDI 16V	BLB	Distribution					Auto	VAG-r
		BNA	Distribution					Auto	VAG-r
		BRE	Distribution					Auto	VAG-r
Citroën									
BX									
	1.6	XU51C	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
		XU52C	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
	1.9 Sport	XU9J2	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
ZX									
	1,6	XU5M	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
		XU5JP	Distribution				54-56	4	62-65
	1,8	XU7JP	Distribution				54-56	4	62-65
	1,9	XU9JA	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
		XU9JAZ	Distribution	01/1992	▶	01/1992		Auto	PSA-bh
			Distribution		▶		54-56	4	62-65
	2,0	XU10J2	Distribution				46-48	4	62-65
Xantia									
	1,6	XU5JP	Distribution				54-56	4	62-65
	1,8	XU7JP	Distribution				54-56	4	62-65
	2,0	XU10J2C	Distribution				46-48	4	62-65
	2,0 T	XU10J2TE	Distribution				46-48	4	62-65
Xsara									
	1,8	XU7JB	Distribution				54-56	4	62-65
		XU7JP	Distribution				54-56	4	62-65

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Einstellspannung
Tension de réglage**
Adjustment tension



**Schema
Schéma**
Diagram



T1 - Hz

T2 - Hz

Citroën											
Evasion											
	1,8	XU7JP	Distribution					54-56	4	62-65	PSA-bg
	2,0	XU10J2	Distribution					46-48	4	62-65	PSA-bg
		XU102C	Distribution					46-48	4	62-65	PSA-bg
	2,0 Turbo	XU10J2TE	Distribution					46-48	4	62-65	PSA-bg
XM											
	2.0	XU102C	Distribution					46-48	4	62-65	PSA-bg
			Distribution	07/1993	▶	06/1993		46-48	4	62-65	PSA-bg
		XU10J2	Distribution					46-48	4	62-65	PSA-bg
			Distribution	07/1993	▶	06/1993		46-48	4	62-65	PSA-bg
	2.0 turbo	XU10J2TE	Distribution					46-48	4	62-65	PSA-bg
Berlingo											
	1,8	XU7JP	Distribution					54-56	4	62-65	PSA-bg
Fiat											
Ulysse											
	1,8	XU7JP	Distribution					54-56	4	62-65	FLA-ay
	2,0	XU10J2C	Distribution					46-48	4	62-65	FLA-ay
	2,0 Turbo	XU10J2CTE	Distribution					46-48	4	62-65	FLA-ay
Lancia											
Zeta											
	2,0 Turbo	XU10J2CTE	Distribution					46-48	4	62-65	FLA-ay
Opel											
Corsa											
	1.2	C12NZ	Distribution							Auto	OPE-ad
		12NC	Distribution							Auto	OPE-ad
		12NZ	Distribution							Auto	OPE-ad
		E12GV	Distribution							Auto	OPE-ad
		X12NZ	Distribution							Auto	OPE-ad
		X12SZ	Distribution							Auto	OPE-ad
	1.3	C13N	Distribution					66-69	2	66-69	OPE-ac
		C13S	Distribution					66-69	2	66-69	OPE-ac
		13N	Distribution					66-69	2	66-69	OPE-ac
		13NB	Distribution					66-69	2	66-69	OPE-ac

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Opel							
Corsa							
1.3	13S	Distribution			66-69	2	66-69 OPE-ac
	13SB	Distribution			66-69	2	66-69 OPE-ac
1.4	14NV	Distribution		> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
		Distribution		Mtr. 02 J22 350 >			Auto OPE-ad
C14NV	Distribution			> 19 307 805	65-68	2	65-68 OPE-ac
	Distribution			19 307 806 >			Auto OPE-ad
C14NZ	Distribution			> 19 311 737	65-68	2	65-68 OPE-ac
	Distribution			19 311 738 >			Auto OPE-ad
C14SE	Distribution			> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
	Distribution			Mtr. 02 J22 350 >			Auto OPE-ad
X14SZ	Distribution						Auto OPE-ad
1.6	C16NZ	Distribution		> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
		Distribution		Mtr. 02 J22 350 >			Auto OPE-ad
C16SE	Distribution			> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
	Distribution			Mtr. 02 J22 350 >			Auto OPE-ad
C16SEI	Distribution			> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
	Distribution			Mtr. 02 J22 350 >			Auto OPE-ad
E16SE	Distribution			> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
	Distribution			Mtr. 02 J22 350 >			Auto OPE-ad
1.7 DTI 16V	Y17DT	Distribution					Auto OPE-ae
	Y17DTL	Distribution					Auto OPE-ae
1.7 CDTI	Z17DTH	Distribution					Auto OPE-ae
Kadett							
1.3	13N	Distribution			66-69	2	66-69 OPE-ac
	13NB	Distribution			66-69	2	66-69 OPE-ac
	13S	Distribution			66-69	2	66-69 OPE-ac
	C13N	Distribution			66-69	2	66-69 OPE-ac
1.4	14NV	Distribution		> 19 307 805	65-68	2	65-68 OPE-ac
		Distribution		19 307 806 >			Auto OPE-ad
C14NZ	Distribution			> 19 311 737	65-68	2	65-68 OPE-ac
	Distribution			19 311 738 >			Auto OPE-ad
1.6	C16LZ	Distribution		> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
		Distribution		Mtr. 02 J22 350 >			Auto OPE-ad
C16NZ	Distribution			> Mtr. 02 J22 349	65-68	2	65-68 OPE-ac
	Distribution			Mtr. 02 J22 350 >			Auto OPE-ad

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics



Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Opel										
Kadett										
Opel Kadett	1.6	E16NZ	Distribution		> Mtr. 02 J22 349	65-68	2	65-68	OPE-ac	
			Distribution		Mtr. 02 J22 350 >			Auto	OPE-ad	
		16SV	Distribution		> Mtr. 02 J22 349	65-68	2	65-68	OPE-ac	
			Distribution		Mtr. 02 J22 350 >			Auto	OPE-ad	
		16SH	Distribution		> Mtr. 02 J22 349	65-68	2	65-68	OPE-ac	
			Distribution		Mtr. 02 J22 350 >			Auto	OPE-ad	
	1.8	E18NV	Distribution			55-58	2	55-58	OPE-ac	
		C18NE	Distribution			55-58	2	55-58	OPE-ac	
		18E	Distribution			55-58	2	55-58	OPE-ac	
18SE		Distribution			55-58	2	55-58	OPE-ac		
2.0	C20NE	Distribution			55-58	2	55-58	OPE-ac		
	20NE	Distribution			55-58	2	55-58	OPE-ac		
	20SEH	Distribution			55-58	2	55-58	OPE-ac		
Astra										
Astra	1.4	14NV	Distribution					Auto	OPE-ad	
		14SE	Distribution					Auto	OPE-ad	
		C14NZ	Distribution					Auto	OPE-ad	
		C14SE	Distribution					Auto	OPE-ad	
		X14NZ	Distribution					Auto	OPE-ad	
	1.6	C16NZ	Distribution						Auto	OPE-ad
C16SE		Distribution						Auto	OPE-ad	
16NZR		Distribution						Auto	OPE-ad	
Combo										
Combo	1.7 DTi 16V	Y17DT	Distribution					Auto	OPE-ae	
		Y17DTL	Distribution					Auto	OPE-ae	
Peugeot										
Peugeot 205	1,6	XU5CP	Distribution	01/1992	>	01/1992		Auto	PSA-bh	
			Distribution		>		54-56	4	62-65	PSA-bg
		XU51C	Distribution	01/1992	>	01/1992		Auto	PSA-bh	
			Distribution		>		54-56	4	62-65	PSA-bg
	1,6 i	XU5J	Distribution	01/1992	>	01/1992		Auto	PSA-bh	
			Distribution		>		54-56	4	62-65	PSA-bg
	XU5JA	Distribution	01/1992	>	01/1992		Auto	PSA-bh		
		Distribution		>		54-56	4	62-65	PSA-bg	

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Merkmal
Caractéristiques**
Characteristics



**Einstellspannung
Tension de réglage**
Adjustment tension



**Schema
Schéma**
Diagram



Peugeot											
205											
1,9 i	XU9J1	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
1,9 GTI	XU9JA	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU9JAZ	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
306											
1,8	XU7JP	Distribution						54-56	4	62-65	PSA-bg
2,0	XU10J2	Distribution						46-48	4	62-65	PSA-bg
309											
1,6	XU5J	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU51C	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU5M	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
1,9	XU9J1	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU9M	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU92C	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
1,9 GTI	XU9JA	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
405											
1,6	XU51C	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU52C	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU5JP	Distribution						54-56	4	62-65	PSA-bg
	XU5M	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg
1,8	XU7JP	Distribution						54-56	4	62-65	PSA-bg
1,9	XU92C	Distribution		01/1992	▶	01/1992		54-56	4	Auto 62-65	PSA-bh PSA-bg

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



T1 - Hz

T2 - Hz

Peugeot										
405										
1,9	XU9J1	Distribution	Distribution	01/1992	▶	01/1992	54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU9J2	Distribution	Distribution	01/1992	▶	01/1992	54-56	4	Auto 62-65	PSA-bh PSA-bg
	XU9J2C	Distribution					54-56	4	62-65	PSA-bg
	XU9M	Distribution	Distribution	01/1992	▶	01/1992	54-56	4	Auto 62-65	PSA-bh PSA-bg
2,0	XU10J2	Distribution					46-48	4	62-65	PSA-bg
406										
1,6	XU5JP	Distribution					54-56	4	62-65	PSA-bg
1,8	XU7JB	Distribution					54-56	4	62-65	PSA-bg
	XU7JP	Distribution					54-56	4	62-65	PSA-bg
2,0 Turbo	XU10J2TE	Distribution					46-48	4	62-65	PSA-bg
605										
2,0	XU10J2	Distribution	Distribution	07/1993	▶	06/1993	46-48	4	62-65	PSA-bg
	XU10J2C	Distribution	Distribution	07/1993	▶	06/1993	46-48	4	62-65	PSA-bg
	XU10M	Distribution	Distribution	07/1993	▶	06/1993	46-48	4	62-65	PSA-bg
2,0 Turbo	XU10CT	Distribution					46-48	4	62-65	PSA-bg
	XU10J2CT	Distribution					46-48	4	62-65	PSA-bg
806										
1,8	XU7JP	Distribution					54-56	4	62-65	PSA-bg
2,0	XU10J2	Distribution					46-48	4	62-65	PSA-bg
2,0 Turbo	XU10J2TE	Distribution					46-48	4	62-65	PSA-bg
Partner										
1,8	XU7JB	Distribution					54-56	4	62-65	PSA-bg
Expert										
1,8	XU7JP	Distribution					54-56	4	62-65	PSA-bg
	XU7JB	Distribution					54-56	4	62-65	PSA-bg

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Merkmal
Caractéristiques**
Characteristics

**Einstellspannung
Tension de réglage**
Adjustment tension



T1 - Hz

T2 - Hz

**Schema
Schéma**
Diagram

Peugeot										
Ranch										
	1,8	XU7JB	Distribution				54-56	4	62-65	PSA-bg
Seat										
Arosa										
1.4 16V	AFK	Distribution							Auto	VAG-w
	AHW	Distribution							Auto	VAG-w
	AKQ	Distribution							Auto	VAG-w
	AQQ	Distribution							Auto	VAG-w
Ibiza										
1.0	AUC	Distribution							Auto	VAG-c
1.4	ANX	Distribution							Auto	VAG-c
1.4 16V	APE	Distribution							Auto	VAG-w
	AQQ	Distribution							Auto	VAG-w
	AUB	Distribution							Auto	VAG-w
	BBY	Distribution							Auto	VAG-w
	BBZ	Distribution							Auto	VAG-w
1.6	AFT	Distribution					79-82	2	79-82	VAG-a
1,9 D	1Y	Distribution		1997	> Mtr. 378 364		120-123	2	120-123	VAG-x
		Distribution		1997	Mtr. 378 365 >				Auto	VAG-d
		Distribution	1998						Auto	VAG-i
	AQM	Distribution			> Mtr. 045 000				Auto	VAG-v
		Distribution			Mtr. 045 001 >				Auto	VAG-v
1.9 SDi	AGP	Distribution			> Mtr. 595 000				Auto	VAG-v
		Distribution			Mtr. 595 001 >				Auto	VAG-v
	ASY	Distribution							Auto	VAG-v
	1Z	Distribution		1997					Auto	VAG-i
		Distribution	1998						Auto	VAG-i
	AHU	Distribution		1997					Auto	VAG-i
		Distribution	1998						Auto	VAG-i
	AFN	Distribution		1997					Auto	VAG-i
		Distribution	1998						Auto	VAG-i
	ALH	Distribution			> Mtr. 500 000				Auto	VAG-v
		Distribution			Mtr. 500 001 >				Auto	VAG-v
	ASK	Distribution							Auto	VAG-v
	ASV	Distribution							Auto	VAG-v

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



T1 - Hz

T2 - Hz

Seat								
Cordoba								
1.0	AER	Distribution				Auto VAG-c		
	ANV	Distribution				Auto VAG-c		
	ALD	Distribution				Auto VAG-c		
	AUC	Distribution				Auto VAG-c		
	1.4 16V	APE	Distribution				Auto VAG-w	
		AQQ	Distribution				Auto VAG-w	
		AUB	Distribution				Auto VAG-w	
		BBY	Distribution				Auto VAG-w	
		BBZ	Distribution				Auto VAG-w	
	1.6	AFT	Distribution		79-82	2	79-82 VAG-a	
		1,9 D/SDi/TD/TDi	1Y	Distribution	> Mtr. 378 364	120-123	2	120-123 VAG-x
				Distribution	Mtr. 378 365 >			Auto VAG-d
		AEY	Distribution				Auto VAG-i	
		AQM	Distribution	> Mtr. 045 000				Auto VAG-v
Distribution			Mtr. 045 001 >				Auto VAG-v	
AGP		Distribution	> Mtr. 595 000				Auto VAG-v	
		Distribution	Mtr. 595 001 >				Auto VAG-v	
ASY		Distribution				Auto VAG-v		
AAZ		Distribution	> Mtr. 552 765	120-123	2	120-123 VAG-x		
		Distribution	Mtr. 552 766 >				Auto VAG-d	
AGR		Distribution	> Mtr. 565 000				Auto VAG-v	
		Distribution	Mtr. 565 001 >				Auto VAG-v	
AFN		Distribution				Auto VAG-i		
AHU	Distribution				Auto VAG-i			
1Z	Distribution				Auto VAG-i			
ALH	Distribution	> Mtr. 500 000				Auto VAG-v		
	Distribution	Mtr. 500 001 >				Auto VAG-v		
ASK	Distribution				Auto VAG-v			
ASV	Distribution				Auto VAG-v			
Leon								
1.4 16V	AHW	Distribution				Auto VAG-w		
	APE	Distribution				Auto VAG-w		
	AXP	Distribution				Auto VAG-w		

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



T1 - Hz

T2 - Hz

Seat									
Leon									
1.6 16V	AUS	Distribution						Auto	VAG-w
	AZD	Distribution						Auto	VAG-w
	BCB	Distribution						Auto	VAG-w
1.9 SDi	AQM	Distribution						Auto	VAG-v
		Distribution			> Mtr. 045 000			Auto	VAG-v
					Mtr. 045 001 >				
1.9 TDi	AGR	Distribution						Auto	VAG-v
		Distribution			> Mtr. 565 000			Auto	VAG-v
					Mtr. 565 001 >				
	AHF	Distribution						Auto	VAG-v
		Distribution			> Mtr. 565 000			Auto	VAG-v
					Mtr. 565 001 >				
	ALH	Distribution						Auto	VAG-v
		Distribution			> Mtr. 500 000			Auto	VAG-v
					Mtr. 500 001 >				
	ASV	Distribution						Auto	VAG-v
Toledo									
1.4 16V	AHW	Distribution						Auto	VAG-w
	APE	Distribution						Auto	VAG-w
	AXP	Distribution						Auto	VAG-w
	BCA	Distribution						Auto	VAG-w
1.6	EZ	Distribution					77-80	2	77-80 VAG-a
	ABN	Distribution					77-80	2	77-80 VAG-a
	AFT	Distribution					79-82	2	79-82 VAG-a
1.6 16V	BCB	Distribution							Auto VAG-w
1,8	RP	Distribution					77-80	2	77-80 VAG-a
	ADZ	Distribution					77-80	2	77-80 VAG-a
1,9 D/SDi	1Y	Distribution							> Mtr. 378 364
		Distribution					120-123	2	Mtr. 378 365 >
							120-123	2	Auto VAG-x
	1Z	Distribution							Auto VAG-i
		Distribution			08/1994				Auto VAG-i
		Distribution			1998				Auto VAG-i
									> 07/1994
									> 1998
	AAZ	Distribution							> Mtr. 378 364
		Distribution					120-123	2	Mtr. 378 365 >
							120-123	2	Auto VAG-x
	AFN	Distribution							Auto VAG-i
		Distribution							Auto VAG-i
					1998				> 1997

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Seat										
Toledo										
1.9 TD/TDi	AHU	Distribution							Auto	VAG-i
		Distribution	08/1994	►	07/1994				Auto	VAG-i
		Distribution	1998	►	1998				Auto	VAG-i
	AGR	Distribution				> Mtr. 565 000			Auto	VAG-v
		Distribution				Mtr. 565 001 >			Auto	VAG-v
	AHF	Distribution				> Mtr. 565 000			Auto	VAG-v
		Distribution				Mtr. 565 001 >			Auto	VAG-v
	ALH	Distribution				> Mtr. 500 000			Auto	VAG-v
		Distribution				Mtr. 500 001 >			Auto	VAG-v
	ASV	Distribution							Auto	VAG-v
Alhambra										
1,9 TDi	AFN	Distribution							Auto	VAG-i
	AHU	Distribution				> Mtr. 289 575			Auto	VAG-i
		Distribution				Mtr. 289 576 >			Auto	VAG-i
	1Z	Distribution				> Mtr. 289 575			Auto	VAG-i
		Distribution				Mtr. 289 576 >			Auto	VAG-i
Inca										
1.4 16V	AUA	Distribution							Auto	VAG-w
1.6	1F	Distribution						77-80 2	77-80	VAG-a
1.7 SDi	AHB	Distribution							Auto	VAG-d
		Distribution	1998	►	1997				Auto	VAG-i
1.9 D	1Y	Distribution							Auto	VAG-d
1.9 SDi	AEY	Distribution							Auto	VAG-d
		Distribution	1998	►	1997				Auto	VAG-i
	AYQ	Distribution				> Mtr. 005 517			Auto	VAG-v
		Distribution				Mtr. 005 518 >			Auto	VAG-v
1.9 TDi	AHU	Distribution							Auto	VAG-d
		Distribution	1998	►	1997				Auto	VAG-i
Skoda										
Fabia										
1.4 16V	AUA	Distribution							Auto	VAG-w
	AUB	Distribution							Auto	VAG-w
	BBY	Distribution							Auto	VAG-w
	BBZ	Distribution							Auto	VAG-w
1.9 SDi	ASY	Distribution				> Mtr. 021 000			Auto	VAG-v
		Distribution				Mtr. 021 001 >			Auto	VAG-v

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Merkmal
Caractéristiques**
Characteristics

**Einstellspannung
Tension de réglage**
Adjustment tension



**Schema
Schéma**
Diagram



Skoda					
Octavia					
1.4 16V	AXP	Distribution			Auto VAG-w
	BCA	Distribution			Auto VAG-w
1.8 20V	AGN	Distribution			Auto VAG-h
RS 1.8 T	AUQ	Distribution			Auto VAG-h
1.9 SDi	AGP	Distribution	> Mtr. 595 000		Auto VAG-v
		Distribution	Mtr. 595 001 >		Auto VAG-v
	AQM	Distribution	> Mtr. 045 000		Auto VAG-v
		Distribution	Mtr. 045 001 >		Auto VAG-v
1.9 TDi	AGR	Distribution	> Mtr. 565 000		Auto VAG-v
		Distribution	Mtr. 565 001 >		Auto VAG-v
	AHF	Distribution	> Mtr. 595 000		Auto VAG-v
		Distribution	Mtr. 595 001 >		Auto VAG-v
	ALH	Distribution	> Mtr. 500 000		Auto VAG-v
		Distribution	Mtr. 500 001 >		Auto VAG-v
1.9 TDi	ASV	Distribution	> Mtr. 150 000		Auto VAG-v
		Distribution	Mtr. 150 001 >		Auto VAG-v
2.0 TDi 16V	AZV	Distribution			Auto VAG-r
		BKD	Distribution		Auto VAG-r
Volkswagen					
Lupo					
1.4 16V	AHW	Distribution			Auto VAG-w
	AKQ	Distribution			Auto VAG-w
	APE	Distribution			Auto VAG-w
	AQQ	Distribution			Auto VAG-w
	AFK	Distribution			Auto VAG-w
	AUA	Distribution			Auto VAG-w
	BBY	Distribution			Auto VAG-w
	AUB	Distribution			Auto VAG-w
1.4 16V FSi	ARR	Distribution			Auto VAG-w
1.6 16V GTi	AVY	Distribution			Auto VAG-w
Polo					
1.4 16V	AFK	Distribution			Auto VAG-w
	AHW	Distribution			Auto VAG-w

EVOLUTION 2007-2008

**Fahrzeug
Véhicule**
Vehicle



**Merkmal
Caractéristiques**
Characteristics



**Einstellspannung
Tension de réglage**
Adjustment tension



**Schema
Schéma**
Diagram



T1 - Hz

T2 - Hz

Volkswagen						
Polo						
1.4 16v	APE	Distribution				Auto VAG-w
	AUA	Distribution				Auto VAG-w
1.4 16V	AUB	Distribution				Auto VAG-w
	BBY	Distribution				Auto VAG-w
	BBZ	Distribution				Auto VAG-w
1.6 16V	AJV	Distribution				Auto VAG-w
	ARC	Distribution				Auto VAG-w
1.6 16V GTi	AVY	Distribution				Auto VAG-w
1.7 SDi	AKW	Distribution				Auto VAG-i
1.9 SDi	1Y	Distribution		1998	1997	Auto VAG-d
		Distribution				Auto VAG-i
	AEY	Distribution		1998	1997	Auto VAG-i
		Distribution				Auto VAG-i
	AGP	Distribution			> Mtr. 595 000	Auto VAG-v
		Distribution			Mtr. 595 001 >	Auto VAG-v
	AQM	Distribution			> Mtr. 045 000	Auto VAG-v
		Distribution			Mtr. 045 001 >	Auto VAG-v
	ASY	Distribution				Auto VAG-v
1.9 TDi	AHU	Distribution				Auto VAG-i
	ALE	Distribution				Auto VAG-i
	AFN	Distribution				Auto VAG-i
	AGR	Distribution			> Mtr. 565 000	Auto VAG-v
		Distribution			Mtr. 565 001 >	Auto VAG-v
	ALH	Distribution			> Mtr. 500 000	Auto VAG-v
		Distribution			Mtr. 500 001 >	Auto VAG-v
	ASV	Distribution			> Mtr. 150 000	Auto VAG-v
Distribution				Mtr. 150 001 >	Auto VAG-v	
Scirocco						
1.5	JB	Distribution			77-80	2 77-80 VAG-a
		Distribution			77-80	2 77-80 VAG-a
1.6	EG	Distribution			77-80	2 77-80 VAG-a
		Distribution			77-80	2 77-80 VAG-a
		Distribution			77-80	2 77-80 VAG-a
	FR	Distribution			77-80	2 77-80 VAG-a
		Distribution			77-80	2 77-80 VAG-a

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Volkswagen							
Scirocco							
1.8	DX	Distribution			77-80	2	77-80 VAG-a
	EV	Distribution			77-80	2	77-80 VAG-a
	EX	Distribution			77-80	2	77-80 VAG-a
1.8 16V	JH	Distribution			77-80	2	77-80 VAG-a
1.8 16V	PB	Distribution			77-80	2	77-80 VAG-a
Golf II							
1.8	RH	Distribution			77-80	2	77-80 VAG-a
	RP	Distribution			77-80	2	77-80 VAG-a
Golf III							
1,9 TD	1Y	Distribution	> Mtr. 378 364		120-123	2	120-123 VAG-x
		Distribution	Mtr. 378 365 >				Auto VAG-d
1.9 TDi	AHU	Distribution	> Mtr. 289 575				Auto VAG-i
		Distribution	Mtr. 289 576 >				Auto VAG-i
	1Z	Distribution	> Mtr. 289 575				Auto VAG-i
		Distribution	Mtr. 289 576 >				Auto VAG-i
	AFN	Distribution					Auto VAG-i
Golf IV							
1.4 16V	AHW	Distribution					Auto VAG-w
	AKQ	Distribution					Auto VAG-w
	APE	Distribution					Auto VAG-w
	AXP	Distribution					Auto VAG-w
	BCA	Distribution					Auto VAG-w
1.6 16V	ATN	Distribution					Auto VAG-w
	AUS	Distribution					Auto VAG-w
	AZD	Distribution					Auto VAG-w
	BCB	Distribution					Auto VAG-w
1.6 16V FSi	BAD	Distribution					Auto VAG-w
1.8	ANP	Distribution	> Cha. 1E-2-015000		77-80	2	77-80 VAG-a
	ADZ	Distribution	> Cha. 1E-2-015000		77-80	2	77-80 VAG-a
1.9 SDi	AGP	Distribution	> Mtr. 595 000				Auto VAG-v
		Distribution	Mtr. 595 001 >				Auto VAG-v

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Volkswagen										
Fahrzeug Véhicule Vehicle	Merkmal Caractéristiques Characteristics	Einstellspannung Tension de réglage Adjustment tension	Schema Schéma Diagram							
Golf IV	1.9 SDi	AQM	Distribution	> Mtr. 045 000	Auto	VAG-v				
			Distribution	Mtr. 045 001 >	Auto	VAG-v				
	1.9 TDi	AHF	Distribution	> Mtr. 595 000	Auto	VAG-v				
			Distribution	Mtr. 595 001 >	Auto	VAG-v				
		ALH	Distribution	> Mtr. 500 000	Auto	VAG-v				
			Distribution	Mtr. 500 001 >	Auto	VAG-v				
		ASV	Distribution		Auto	VAG-v				
	AGR	Distribution	Distribution	> Mtr. 565 000	Auto	VAG-v				
			Distribution	Mtr. 565 001 >	Auto	VAG-v				
Golf V										
1.6 16V	BCA	Distribution			Auto	VAG-w				
Beetle										
1.9 TDi	ALH	Distribution			Auto	VAG-v				
Jetta										
1.6	EZ	Distribution		77-80	2	77-80	VAG-a			
	PN	Distribution		77-80	2	77-80	VAG-a			
	RF	Distribution		77-80	2	77-80	VAG-a			
	1.8	EV	Distribution		77-80	2	77-80	VAG-a		
		GU	Distribution		77-80	2	77-80	VAG-a		
		GX	Distribution		77-80	2	77-80	VAG-a		
		PB	Distribution		77-80	2	77-80	VAG-a		
1.8 16V	PF	Distribution		77-80	2	77-80	VAG-a			
	RD	Distribution		77-80	2	77-80	VAG-a			
	1P	Distribution		77-80	2	77-80	VAG-a			
2.0 TDi 16V	RH	Distribution		77-80	2	77-80	VAG-a			
	RP	Distribution		77-80	2	77-80	VAG-a			
	AZV	Distribution					Auto	VAG-r		
	BKD	Distribution					Auto	VAG-r		
Vento										
1.9 D/TD	1Y	Distribution	Distribution	> Mtr. 378 364	120-123	2	120-123	VAG-x		
			Distribution	Mtr. 378 365 >			Auto	VAG-d		
	AAZ	Distribution	Distribution	> Mtr. 552 765	120-123	2	120-123	VAG-x		
		Distribution	Distribution	Mtr. 552 766 >			Auto	VAG-d		

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics

Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Volkswagen							
Vento							
1,9 SDI/TDi	1Z	Distribution	> Mtr. 289 575			Auto	VAG-i
		Distribution	Mtr. 289 576 >			Auto	VAG-i
	AFN	Distribution				Auto	VAG-i
	AHU	Distribution	> Mtr. 289 575			Auto	VAG-i
		Distribution	Mtr. 289 576 >			Auto	VAG-i
Passat							
1.6	1F	Distribution		77-80	2	77-80	VAG-a
	EZ	Distribution		77-80	2	77-80	VAG-a
	AEK	Distribution		77-80	2	77-80	VAG-a
	AFT	Distribution		77-80	2	77-80	VAG-a
	MV	Distribution		77-80	2	77-80	VAG-a
	DT	Distribution		77-80	2	77-80	VAG-a
1,8	PB	Distribution		77-80	2	77-80	VAG-a
	PF	Distribution		77-80	2	77-80	VAG-a
	RB	Distribution		77-80	2	77-80	VAG-a
	RP	Distribution		77-80	2	77-80	VAG-a
	AAM	Distribution		77-80	2	77-80	VAG-a
	ABS	Distribution		77-80	2	77-80	VAG-a
	ADZ	Distribution		77-80	2	77-80	VAG-a
1.8 20V Turbo	AWM	Distribution				Auto	VAG-h
2.0	ADY	Distribution		77-80	2	77-80	VAG-a
1,9 TD	1Y	Distribution	> Mtr. 378 364	120-123	2	120-123	VAG-x
		Distribution	Mtr. 378 365 >			Auto	VAG-d
	AAZ	Distribution	> Mtr. 552 765	120-123	2	120-123	VAG-x
		Distribution	Mtr. 552 766 >			Auto	VAG-d
	1Z	Distribution	> Mtr. 289 575			Auto	VAG-i
		Distribution	Mtr. 289 576 >			Auto	VAG-i
	AHU	Distribution	> Mtr. 289 575			Auto	VAG-i
		Distribution	Mtr. 289 576 >			Auto	VAG-i
1.9 TDi	AFN	Distribution				Auto	VAG-i

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics



Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Volkswagen										
Bora										
	1.4 16V	AHW	Distribution						Auto	VAG-w
		AKQ	Distribution						Auto	VAG-w
		APE	Distribution						Auto	VAG-w
		AXP	Distribution						Auto	VAG-w
		BCA	Distribution						Auto	VAG-w
	1.6 16V	ATN	Distribution						Auto	VAG-w
		AUS	Distribution						Auto	VAG-w
		AZD	Distribution						Auto	VAG-w
		BCB	Distribution						Auto	VAG-w
	1.6 16V FSi	BAD	Distribution						Auto	VAG-w
	1.8 20V	ARX	Distribution						Auto	VAG-h
	1.9 SDi	AGP	Distribution				> Mtr. 595 000		Auto	VAG-v
			Distribution				Mtr. 595 001 >		Auto	VAG-v
		AQM	Distribution				> Mtr. 045 000		Auto	VAG-v
			Distribution				Mtr. 045 001 >		Auto	VAG-v
	1.9 TDi	AHF	Distribution				> Mtr. 595 000		Auto	VAG-v
			Distribution				Mtr. 595 001 >		Auto	VAG-v
		ASV	Distribution						Auto	VAG-v
		ALH	Distribution				> Mtr. 500 000		Auto	VAG-v
			Distribution				Mtr. 500 001 >		Auto	VAG-v
		AGR	Distribution				> Mtr. 565 000		Auto	VAG-v
			Distribution				Mtr. 565 001 >		Auto	VAG-v
Sharan										
	1,9 TDi	1Z	Distribution				1997		Auto	VAG-i
			Distribution				1998		Auto	VAG-i
		AFN	Distribution				1997		Auto	VAG-i
			Distribution				1998		Auto	VAG-i
		AHU	Distribution				> Mtr. 289 575		Auto	VAG-i
			Distribution				Mtr. 289 576 >		Auto	VAG-i
			Distribution				1998		Auto	VAG-i
Multivan										
	1.9 SDI	ABL	Distribution				> Mtr. 029 319	120-123	2	120-123
			Distribution				Mtr. 029 320 >			Auto
										VAG-x
										VAG-d

EVOLUTION 2007-2008

Fahrzeug
Véhicule
Vehicle



Merkmal
Caractéristiques
Characteristics



Einstellspannung
Tension de réglage
Adjustment tension



Schema
Schéma
Diagram



Volkswagen											
Caddy											
1.4 16V	AUA	Distribution						Auto	VAG-w		
	BCA	Distribution						Auto	VAG-w		
1.5	JB	Distribution				77-80	2	77-80	VAG-a		
1.6	1F	Distribution				77-80	2	77-80	VAG-a		
	EW	Distribution				77-80	2	77-80	VAG-a		
1.8	JH	Distribution				77-80	2	77-80	VAG-a		
1.7 SDi	AHB	Distribution						Auto	VAG-d		
		Distribution	1998	▶	12/1997			Auto	VAG-i		
1.9 D	1Y	Distribution						Auto	VAG-d		
1.9 SDi	AEY	Distribution						Auto	VAG-i		
	AHU	Distribution						Auto	VAG-d		
	ALE	Distribution						Auto	VAG-d		
	ALH	Distribution						Auto	VAG-v		
	AYQ	Distribution						Auto	VAG-v		
Transporter											
1.8	PD	Distribution						77-80	2	77-80	VAG-a
1.9 D/TD	1X	Distribution				> Mtr. 120 077		120-123	2	120-123	VAG-x
		Distribution				Mtr. 120 078 >				Auto	VAG-d
	ABL	Distribution				> Mtr. 029 319		120-123	2	120-123	VAG-x
		Distribution				Mtr. 029 320 >				Auto	VAG-d

EVOLUTION 2007-2008

